

What is Premium Channel on Demand?

1. Watch the best selections from Premium Channels, whenever you want.
2. Start watching at the touch of a button and pause, fast forward and rewind just like a VCR.
3. One low monthly subscription fee gives you unlimited access to all iCONTROL programming for those Premium Channels you already subscribe to.
4. Choose from Original Series, Hit Movies, Sports Specials and Kids Programs from HBO, Showtime, Cinemax, and The Movie Channel. New choices are added every week.
5. You also get iCONTROL exclusives, like past episodes of your favorite original series.

Find a Channel

1. Tune to a **Premium Channel on Demand**. Enter the channel number directly on your Digital Remote, and press **SELECT**. Check your **Channel Lineup** for the channel number.
2. If you don't know the channel number, you can find it by browsing the **Navigator Interactive On-Screen Guide**. Press **GUIDE** to bring up the **Navigator Interactive On-Screen Guide**. Then press the **UP** or **DOWN** arrows to find a **Premium Channel on Demand** and press **SELECT**.

Subscribe

1. If you have not already subscribed, you will be able to do so now.
2. You may be instructed to call Customer Care.

3. Or, you may be given instructions on how to subscribe right here on your TV screen.
4. Press **B** on your Digital Remote to subscribe.
5. Now you must confirm your subscription — this prevents accidental subscriptions. Press **B** to confirm.
6. If you have set up Purchase Protection, you will be asked to enter your PIN number to confirm your subscription. To learn more about **Purchase Protection**, read that tutorial.
7. Once you subscribe, you get unlimited access to all programs. It may take up to 24 hours for all programming to become available on your system.

Find a Program

1. Tune to a **Premium Channel on Demand**.
2. Use the **UP** and **DOWN** arrows to choose a category. Then press **SELECT**.
3. To choose another category, press **C** to return to the previous menu.
4. After you choose a category, the names of all series or genres within that category are listed on the bottom of the screen. Use the **LEFT** and **RIGHT** arrows to choose from these.
5. Use the **UP** and **DOWN** arrows to browse through all the available shows.
6. If you want more information about a show, press **SELECT**.
7. To return to the main menu, press **C**.

— continued —

– continued –

Watch a Show

1. Before you start watching, make sure the VCR/VOD option on your Digital Remote is set to VOD – that stands for video on demand.

Note: Some Digital Remotes have a switch; others a button. If your Digital Remote has neither, it will work automatically – you don't have to change anything.

2. Press **PLAY** to start watching a show.

3. If you have set up Parental Control, and the show you have selected is restricted, you will be asked to enter your PIN number. To learn more about **Parental Control**, read that tutorial.

4. You can **PAUSE, FAST FORWARD** and **REWIND** the show using your Digital Remote – just like a VCR.

5. You can also press **STOP** at any time. When you press **STOP**, you will be given the choice to resume playing from where you left off (press **PLAY**) or to restart the show from the beginning (press **A**).